

## CLEANING PROCEDURES

### Clean the steam outlet

⇒ after every use.

### Clean the drip tray

⇒ once a day.

### Clean the brewheads

⇒ once a day.

### Clean the filter-holders

⇒ once a day

### Clean the body

⇒ once a week.

## USE OF THE RENEKA CLEANING KIT

Your RENEKA machine is delivered with cleaning set sample meant to facilitate and improve the maintenance of your machine. It comes with the following accessories:

- 1 obturator,
- 10 detergent tablets RENEKA
- 1 cleaning brush.

## DAILY CLEANING OF THE BREWHEADS


**The brewheads should be cleaned as follows on a daily basis:**

⇒ Remove the filter holder from the brewhead and empty the contents from prior use.

**To remove the grease from the filter, the decompression circuit and electrical valve:**

⇒ Place the obturator (B) in the two-cup filter-holder.

⇒ Place the RENEKA detergent tablet (A) on the obturator.

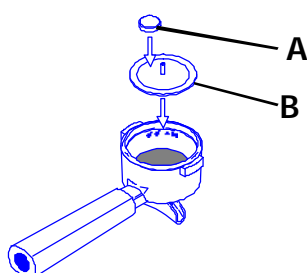


⇒ Fit the filter-holder.

⇒ Run 5 cycles of about 3 seconds each.




### To clean the brewhead ring

⇒ Remove and replace the filter-holder by running a long cycle so that water overflows.

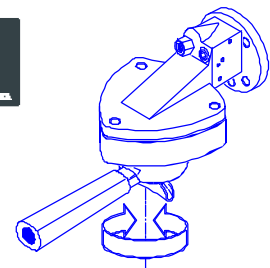

⇒ Remove the filter-holder and the obturator.

⇒ With the help of a brush (C) complete the cleaning operation.

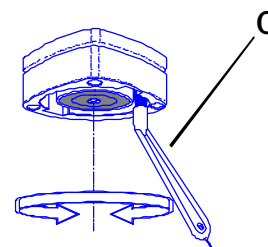

- Start a long cycle for rinsing.

- Replace the filter-holder.

- Start this all over again with all the brewheads.

⇒ Dismantle and wash the grill and the drip tray with water.

⇒ Clean the collector placed under the drip tray with a sponge.

## WEEKLY CLEANING

⇒ Clean the filter unit and the filter-holder by leaving them overnight in water with two tablets of RENEKA detergent. Then rinse with lukewarm water.

⇒ Clean the machine with a wet sponge and then wipe with a dry piece of cloth. The use of abrasives causes damage to the surfaces.